



Parts Manual

Model _____ Fork Positioner

Serial Number _____ 150H-FPS-167

cascade[®]
corporation

For Technical Assistance call: 800-227-2233, Fax: 888-329-8207

To Order Parts call: 888-227-2233, Fax: 888-329-0234

OR


Write: Cascade Corporation, P.O. Box 20187, Portland, OR 97220

Internet: www.cascorp.com

About This Manual

Introduction

This Manual shows the parts breakdown for the 150H Fork Positioner. Locate the nameplate on the left side of the backrest. If the nameplate is missing all necessary information is stamped into the backrest at the same location. The serial number must be supplied when ordering replacement parts for this product.

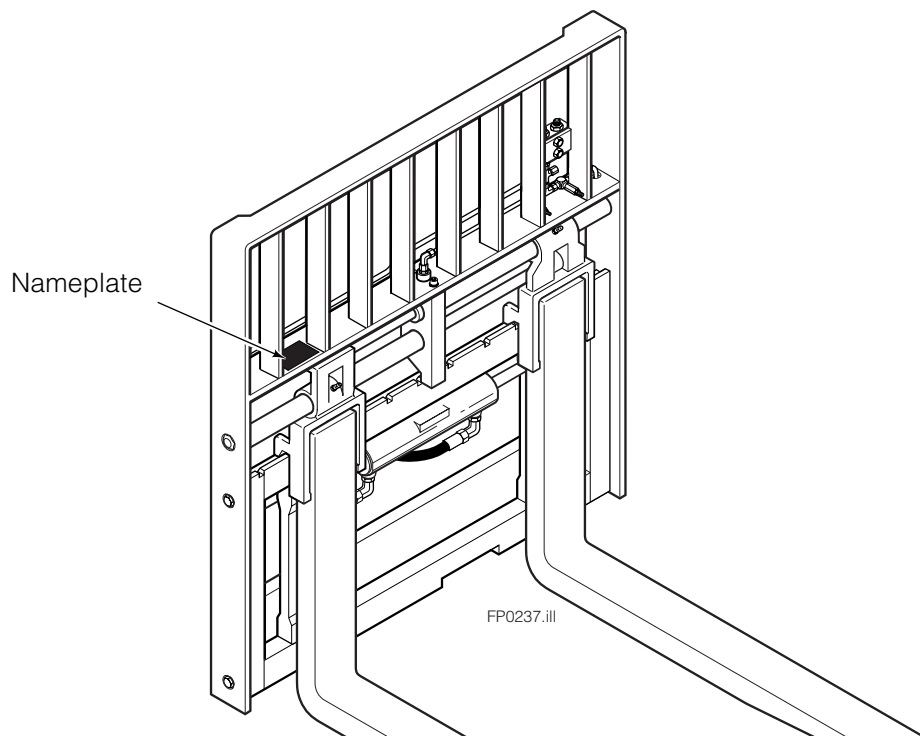

Ordering Parts

Customers – Cascade parts and service literature is available through authorized lift truck dealers. To place an order, contact the lift truck dealer of your choice.

Lift Truck Dealers – To order parts and service literature contact:


Cascade Parts Sales

2501 Sheridan Avenue
Springfield, OH 45505
Tel: 888-CAS-CADE (227-2233)
FAX: 888-329-0234



WARNING: For the safety of yourself and others, DO NOT install the parts shown in this Manual unless you have thoroughly reviewed the appropriate Service Manual.

Fork Postioner Assembly

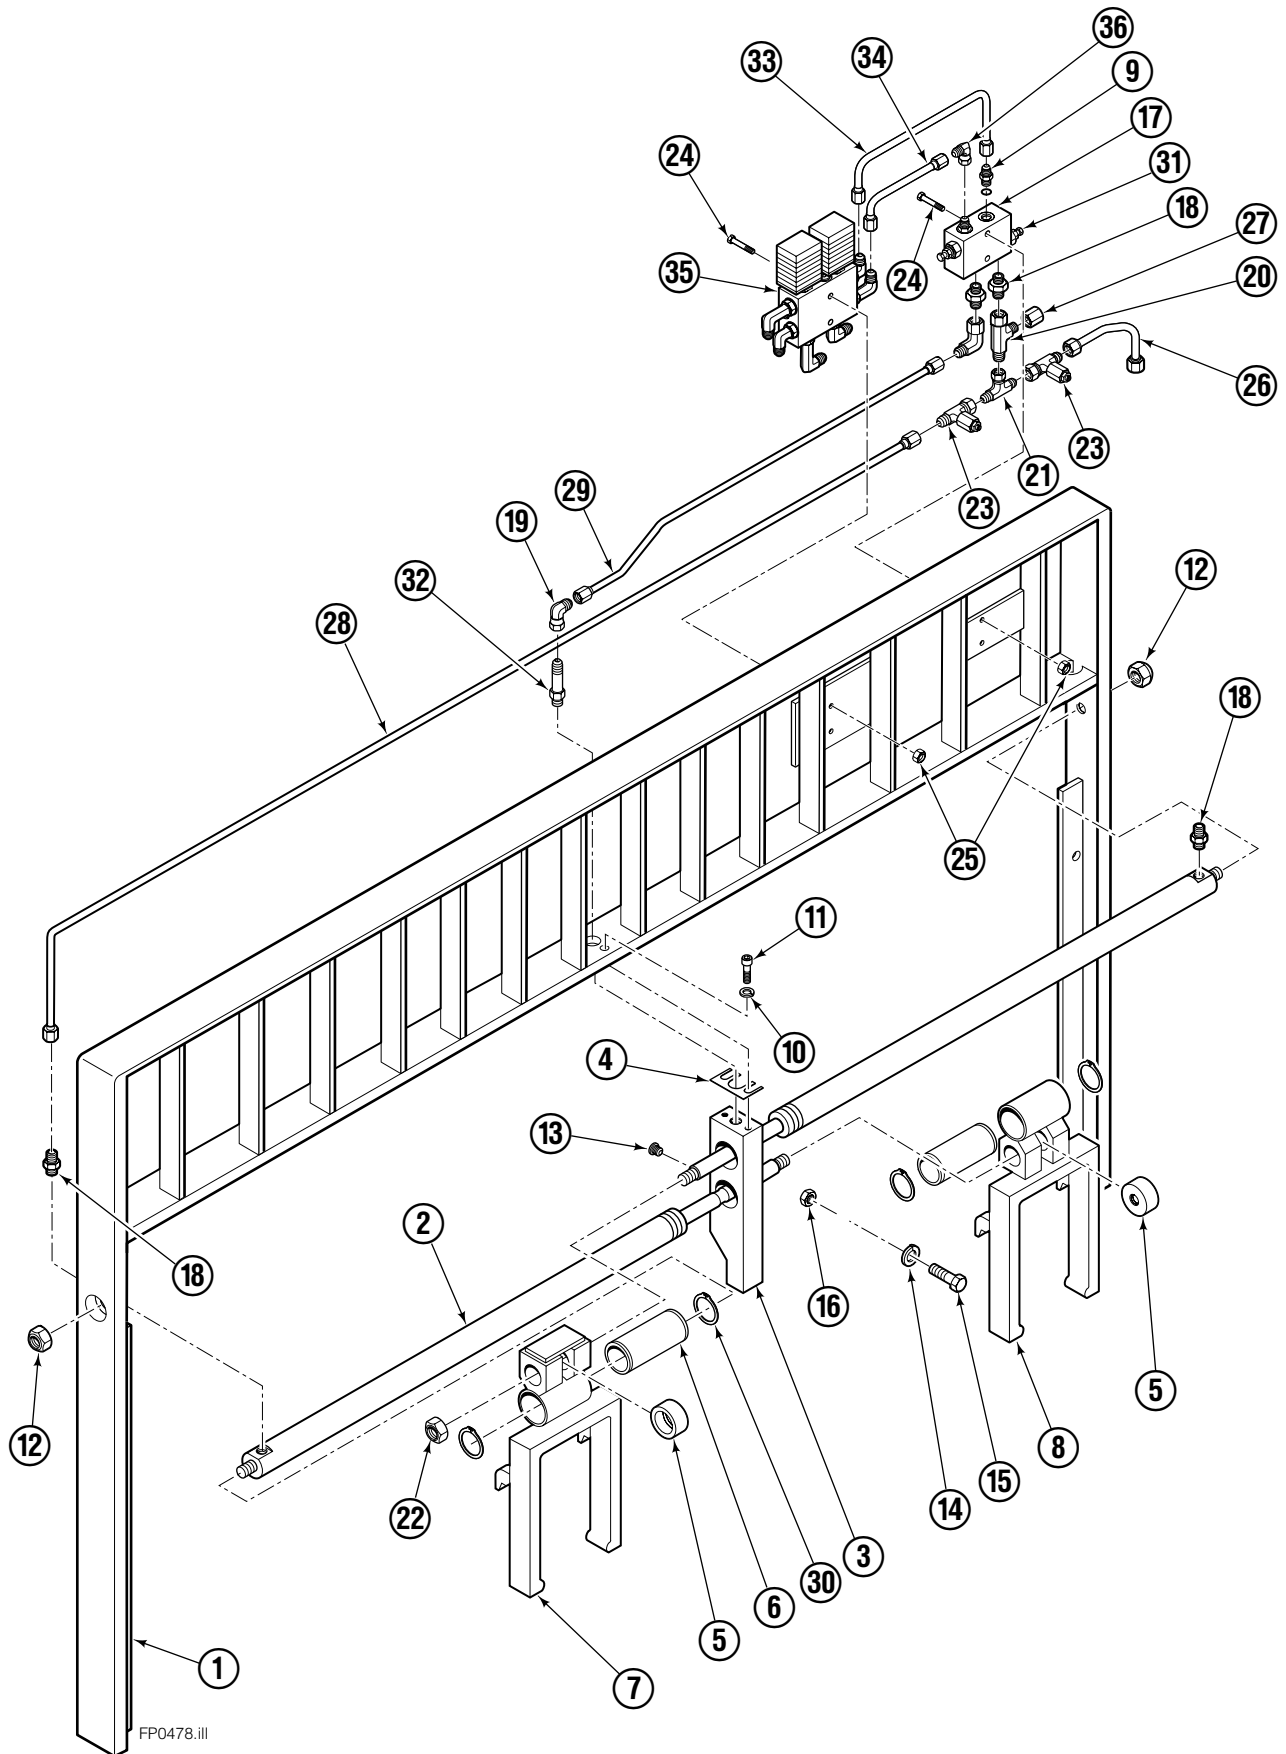

FP0478.ill


Fork Postioner Assembly

150H			
REF	QTY	PART NO.	DESCRIPTION
		6108193	Fork Positioner Assembly ■
1	1	6108194	Frame
2	2	6108198	Cylinder ◆
3	1	6101808	Center Plate
4	1	6007060	Shim
5	2	6006682	Lug
6	2	6006759	Bushing
7	1	6006894	Fork Carrier – RH
8	1	6006879	Fork Carrier – LH
9	2	604511	Fitting, 6-6
10	2	680030	Lockwasher, M10
11	2	217933	Capscrew, M10 x 45
12	2	200244	Nut, .75
13	1	604510	Plug, 6
14	4	683822	Lockwasher, M12
15	4	202407	Capscrew, M12 x 60
16	4	763025	Nut, M12
17	1	215919	Valve Body
18	4	611288	Fitting, 6-8
19	2	2680	Fitting, 6-6
20	1	611329	Fitting, 6-6
21	1	610892	Fitting, 6-6
22	2	200006	Nut, .625
23	2	6009677	Restrictor Fitting
24	2	768528	Capscrew, M8 x 55
25	2	786881	Nut, M8
26	1	6009745	Tube
27	1	2645	Nut, 6
28	1	6105062	Tube
29	1	6105063	Tube
30	4	3154	Snap Ring
31	2	211223	Sun Valve
32	1	605743	Fitting, 6-6
33	1	6103451	Tube
34	1	6103450	Tube
35	1	207302	Valve ●
36	1	601676	Fitting, 6-6

◆ See Cylinder page for parts breakdown.

● See Valve page for parts breakdown.

Cylinder

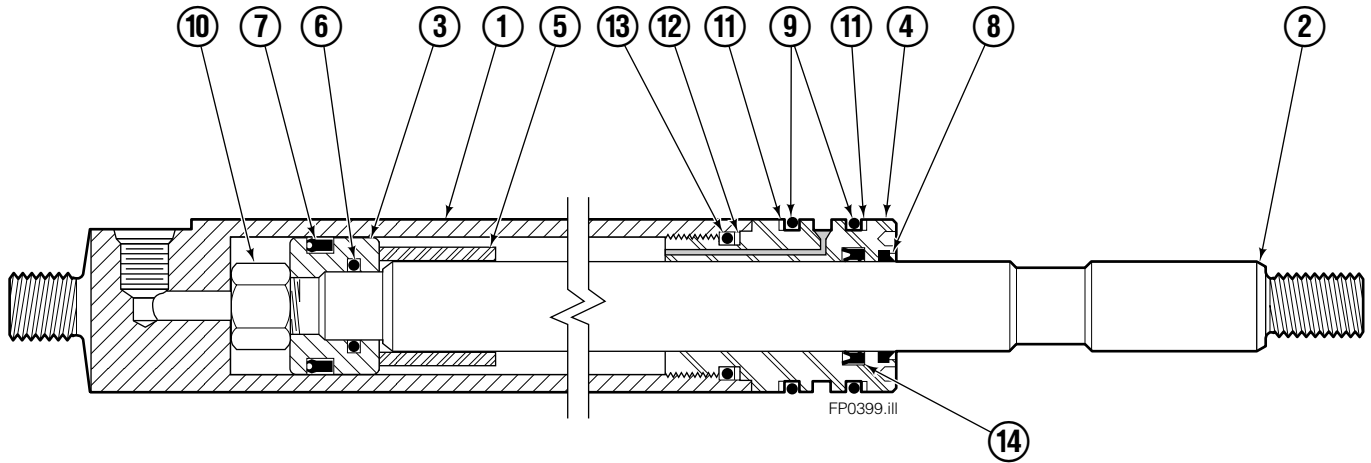


150H			
REF	QTY	PART NO.	DESCRIPTION
		6108198	Cylinder Assembly
1	1	6105068	Shell
2	1	6108199	Rod
3	1	6006925	Piston
4	1	6006966	Retainer
5	1	6006924	Spacer
6	1	2708	● O-Ring
7	1	663728	● Piston Seal
8	1	636851	● Wiper
9	2	2784	● O-Ring
10	1	667623	Nut, .625
11	2	615127	● Back Up Ring
12	1	615125	● Back Up Ring
13	1	2721	● O-Ring
14	1	6010310	● Rod Seal
		6100214	Service Kit

● Included in Service Kit 6100214.

Reference: S-21126, S-21132.


Solenoid Valve

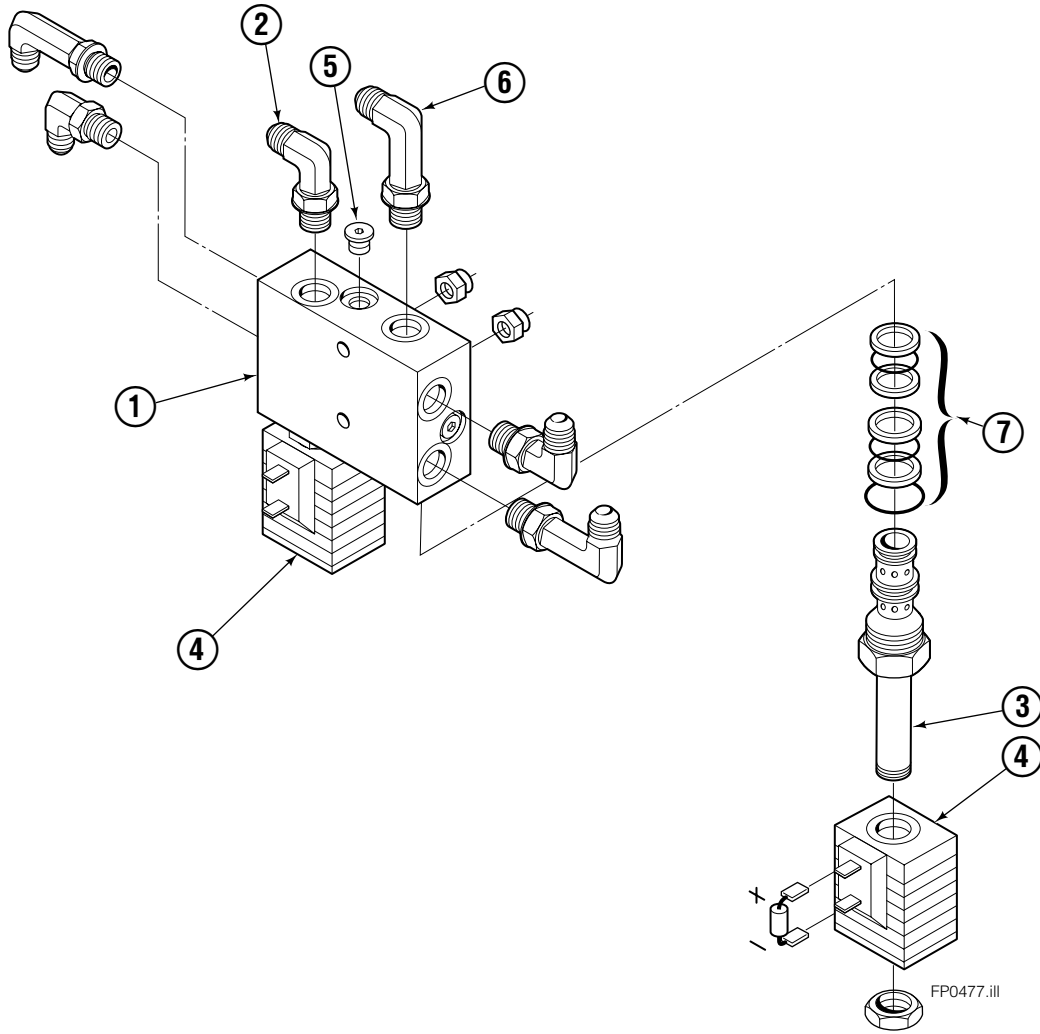

FP0477.ill

55F			
REF	QTY	PART NO.	DESCRIPTION
		207302	Solenoid Valve
1	1	207303	Valve Body
2	3	601676	Fitting, 6-6
3	2	687305	Solenoid Cartridge
4	2	687306	Coil-12V
4	2	687307	Coil-24V
4	2	687308	Coil-36V
4	2	687309	Coil-48V
4	2	687310	Coil-72V
5	4	663694	Fitting, 3
6	3	207304	Fitting, 6-6
7	1	679991	Service Kit

Sideshifter Assembly

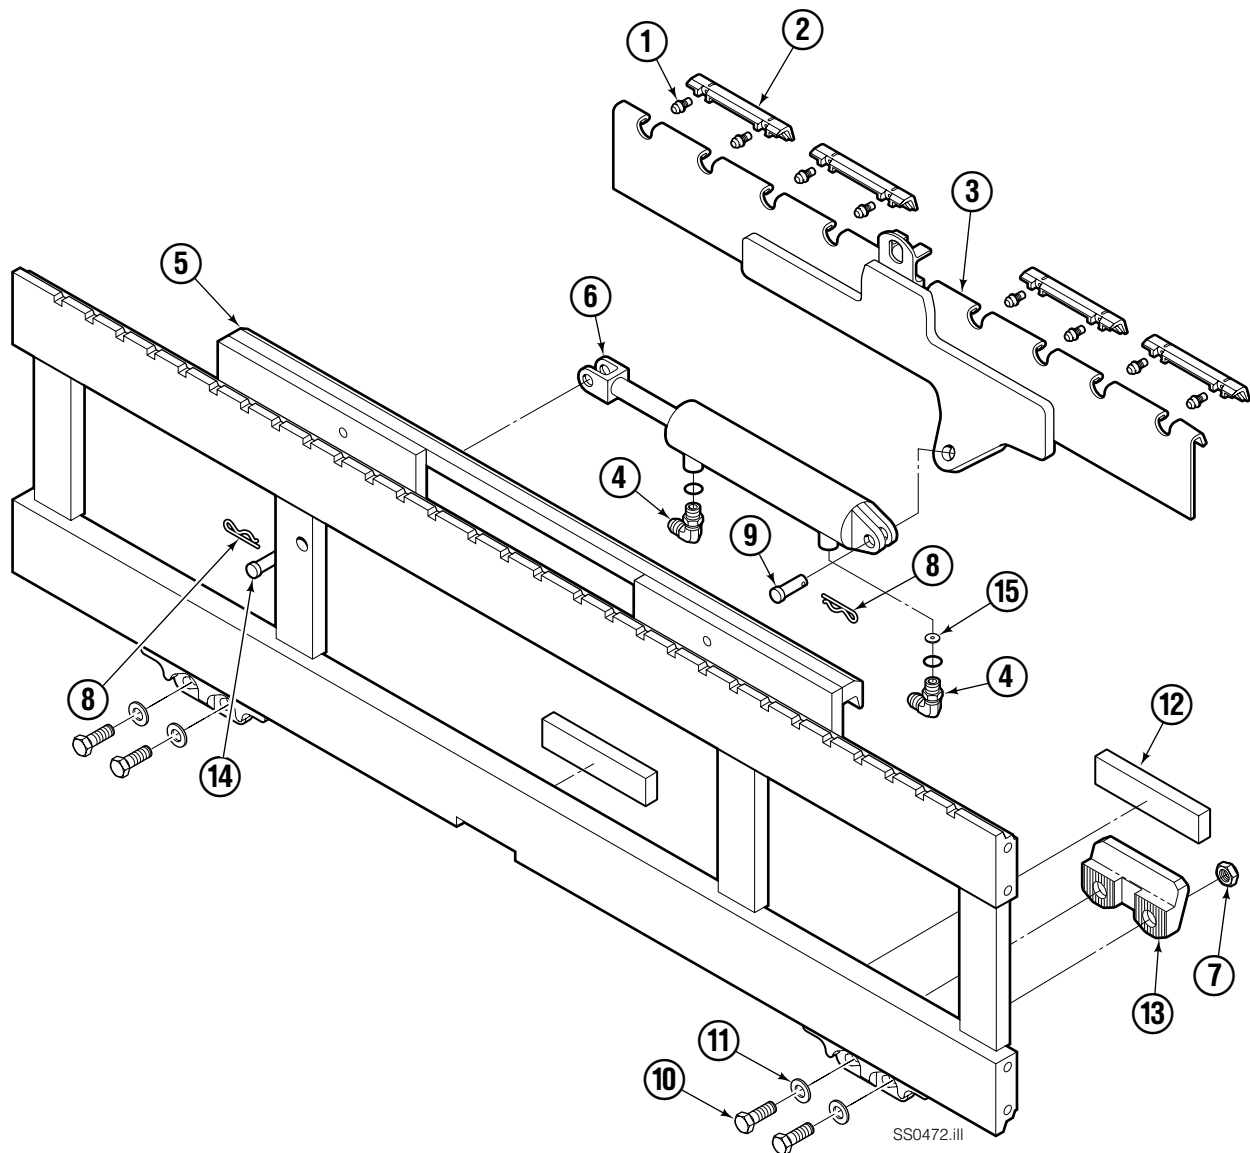

150D

REF	QTY	PART NO.	DESCRIPTION	REF	QTY	PART NO.	DESCRIPTION
		6108225	Sideshifter Assembly	9	1	686215	● Clevis Pin
1	4	7403	Grease Fitting	10	4	752903	◆ Capscrew, M16 x 45
2	4	672018	Bearing Segment	11	4	667225	◆ Washer
3	1	398335	Anchor Bracket	12	3	208350	Lower Bearing
4	2	601676	● Fitting, 6-6	13	2	6004779	◆ Lower Hook
5	1	6108223	Faceplate ■	14	1	686214	● Clevis Pin
6	1	686243	Cylinder ▲	15	1	6024818	● Washer - Restrictor
7	4	678990	◆ Nut			672022	Service Kit - Items 1 & 2
8	2	686217	● Cotter Pin				

■ If the Faceplate needs replacing, your best value is to order the complete Sideshifter Assembly.


▲ See Cylinder page for parts breakdown.

● Included in Common Parts 6100729.

◆ Included in Lower Hook Group 6106298.

Reference: S-21039.

Sideshift Cylinder

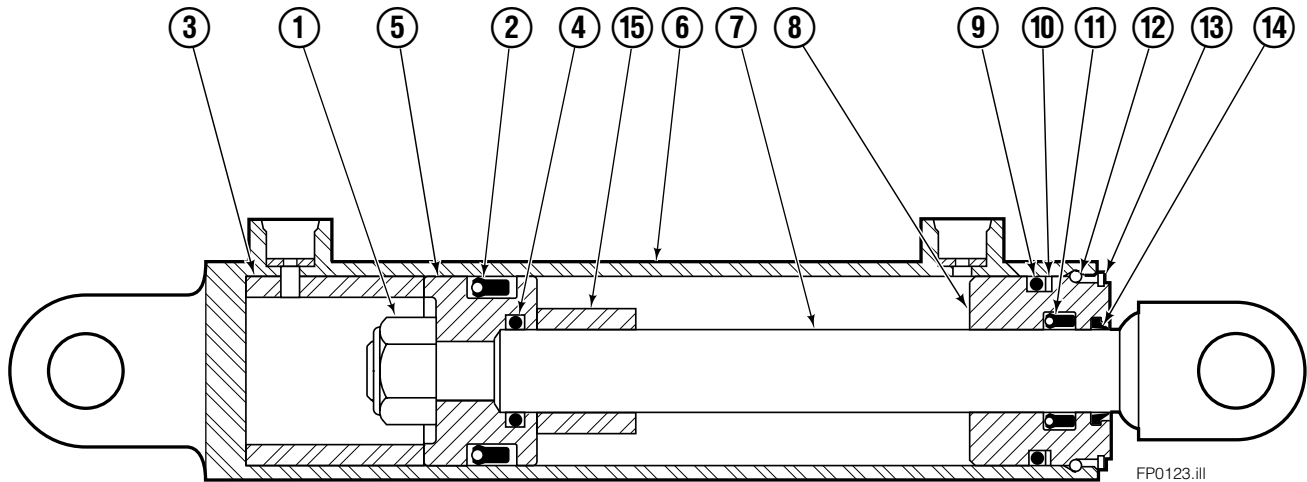

REF	QTY	PART NO.	DESCRIPTION
		686243	Cylinder Assembly
1	1	561012	Nut
2	1	662457	■ Seal
3	1	564562	Spacer – Head
4	1	2718	■ O-Ring
5	1	561427	Piston
6	1	561419	Shell
7	1	561422	Rod
8	1	561428	Retainer
9	1	2791	■ O-Ring
10	1	615134	■ Back-up Ring
11	1	662449	■ Seal
12	1	561429	Retaining Ring
13	1	7215	Snap Ring
14	1	626468	■ Wiper
15	1	---	Spacer – Rod
		561430	Service Kit

■ Included in Service Kit 561430.
Ref: S-6053, S-6054.

Do you have questions you need answered right now? Call your nearest Cascade Parts Department.

Cascade Corporation
2501 Sheridan Avenue
Springfield, OH 45505
Tel: 888-CASCADE (227-2233)
FAX: 888-329-0234
www.cascorp.com

Cascade Canada Inc.
5570 Timberlea Blvd.
Mississauga, Ontario
Canada L4W-4M6
Tel: 905-629-7777
FAX: 905-629-7785

Cascade GmbH
D-41199 Monchengladbach
Klosterhofweg 52
Germany
Tel: 21-66-602091
FAX: 21-66-680947

Cascade Finland
01370 Vantas
Finland
Tel: 358-0-836-1925
FAX: 358-0-836-1935

**Cascade N.V.
European Headquarters**
P.O. Box 3009
1300 El Almere
Damsluisweg 56
1332 ED Almere
The Netherlands
Tel: 31-36-5492911
FAX: 31-36-5492964

**Cascade N.V.
Benelux Sales and Service**
P.O. Box 3009
1300 El Almere
Damsluisweg 56
1332 ED Almere
The Netherlands
Tel: 31-36-5492950
FAX: 31-36-5492974

Cascade (UK) Ltd.
15, Orgreave Crescent
Dore House Industrial Estate
Handsworth
Sheffield S13 9NQ
England
Tel: 742-697524
FAX: 742-695121

**Cascade Scandinavia
Hydraulik A.B.**
Muskötgatan 19, E8-9
S25466 Helsingborg
Sweden
Tel: 42-151135
FAX: 42-152997

Cascade Norway
Østerliveien 37A
1153 Oslo
Norway
Tel: 47-22-743160
FAX: 47-22-743157

Cascade France S.A.R.L.
11, Rue Jean Charcot
Zone Industrielle Sud or
B.P. 22
91421 Morangis Cedex
France
Tel: 1- 64547501
FAX: 1-9790584

Cascade Hispania S.A.
Avenida De La Fabregada, 7
Hospitalet De Llobregat
Barcelona
Spain
Tel: 3-335-5158
FAX: 3-335-4756

Cascade Japan Ltd.
5-5-41,
Torikai Kami
Settsu, Osaka
Japan, 566
Tel: 81-726-53-3490
FAX: 81-726-53-3497

Cascade Korea
Room 508, Pum Yang Bldg.
750-14, Bang Bac-Dong
Se-Cho Ku, Seoul
Korea
Tel: 2599-7131 ext. 512
FAX: 2533-8089

HYCO-Cascade Pty. Ltd.
1445 Ipswich Road
Rocklea,
Queensland 4107
Australia
Tel: 3-274-2722
FAX: 3-274-3456

HYCO-Cascade (NZ) Ltd.
15 Ra Ora Drive, East Tamaki
P.O. Box 38-440
Howick, Auckland
New Zealand
Tel: 9-273-9136
FAX: 9-273-9137

Cascade (Africa) Pty. Ltd.
P.O. Box 625, Isando 1600
60A Steel Road
Sparton, Kempton Park
South Africa
Tel: 975-9240
FAX: 394-1147

Cascade-Xiamen
No. 668 Yangguang Rd.
Xinyang Industrial Zone
Haicang, Xiamen
Fujian Province
P.R. China 361026
Tel: 592-651-2500
FAX: 592-651-2571

**Cascade (Singapore)
Trading Co.**
Four Seasons Park
Autumn Block - Apt. 1802
12 Cascaden Walk
Singapore
Tel: 65-834-1935
FAX: 65-834-1936

